



ATL QUICK REFERENCE GUIDE

HANDSET	KEYBOARD	DESCRIPTION
F1...F7	F1...F7	DIFFERENT FUNCTION DEPENDING ON APPLICATION
#	F9	NO FUNCTION AT PRESENT
		PRINTOUT OF CURRENT DISPLAY
		NO FUNCTION AT PRESENT
?	F8	HELP & SIMULTANEOUS OFF SWITCH FOR MOTORS (EMERGENCY OFF)
		MOVE CURSOR KEY UP/DOWN OR LEFT/RIGHT
	F11	RETURN TO PREVIOUS STEP
	F12	SELECT NEXT STEP
	ESC	ABORT ACTIVE PROGRAM STEP, MENU, POP-UP WINDOW OR FUNCTION WINDOW
		REPEAT TEST
	F10	CHANGE TO APPLICATIONS MENU
C	DELETE	DELETES TEXT TO RIGHT OF CURSOR OR DELETES SELECTED TEXT
.	,	INPUTTING DECIMAL NUMBERS
		CONFIRMING ENTERED INFORMATION
		SWITCHING TO INPUT GROUP
0 to 9	0 to 9	ENTERING NUMBERS