



# Jacking Beam Creep

## Service Guide

# 1 Jacking Beam Creep

Try the following procedure to stop the jacking beam creeping.

It sounds more complicated than it actually is to do, it is effective in curing the creeping in the majority of cases.

- Remove the release spindle by unscrewing it all the way out. To achieve this you to push the lever against the spring and rotate the spindle by hand using the locating pin
- Once removed, inspect the point for contamination and clean
- Use a magnetic tool down the valve block hole, to remove any metallic contamination from the valve seat
- Re-fit and re-seat by screwing the spindle back in as tightly as possible and tap it home once or twice. If you can get any more turn on it, tap it again.



With all the quality, service and backup you would expect from a UK company with a long standing history like  
Crypton.