



Scissor Lift

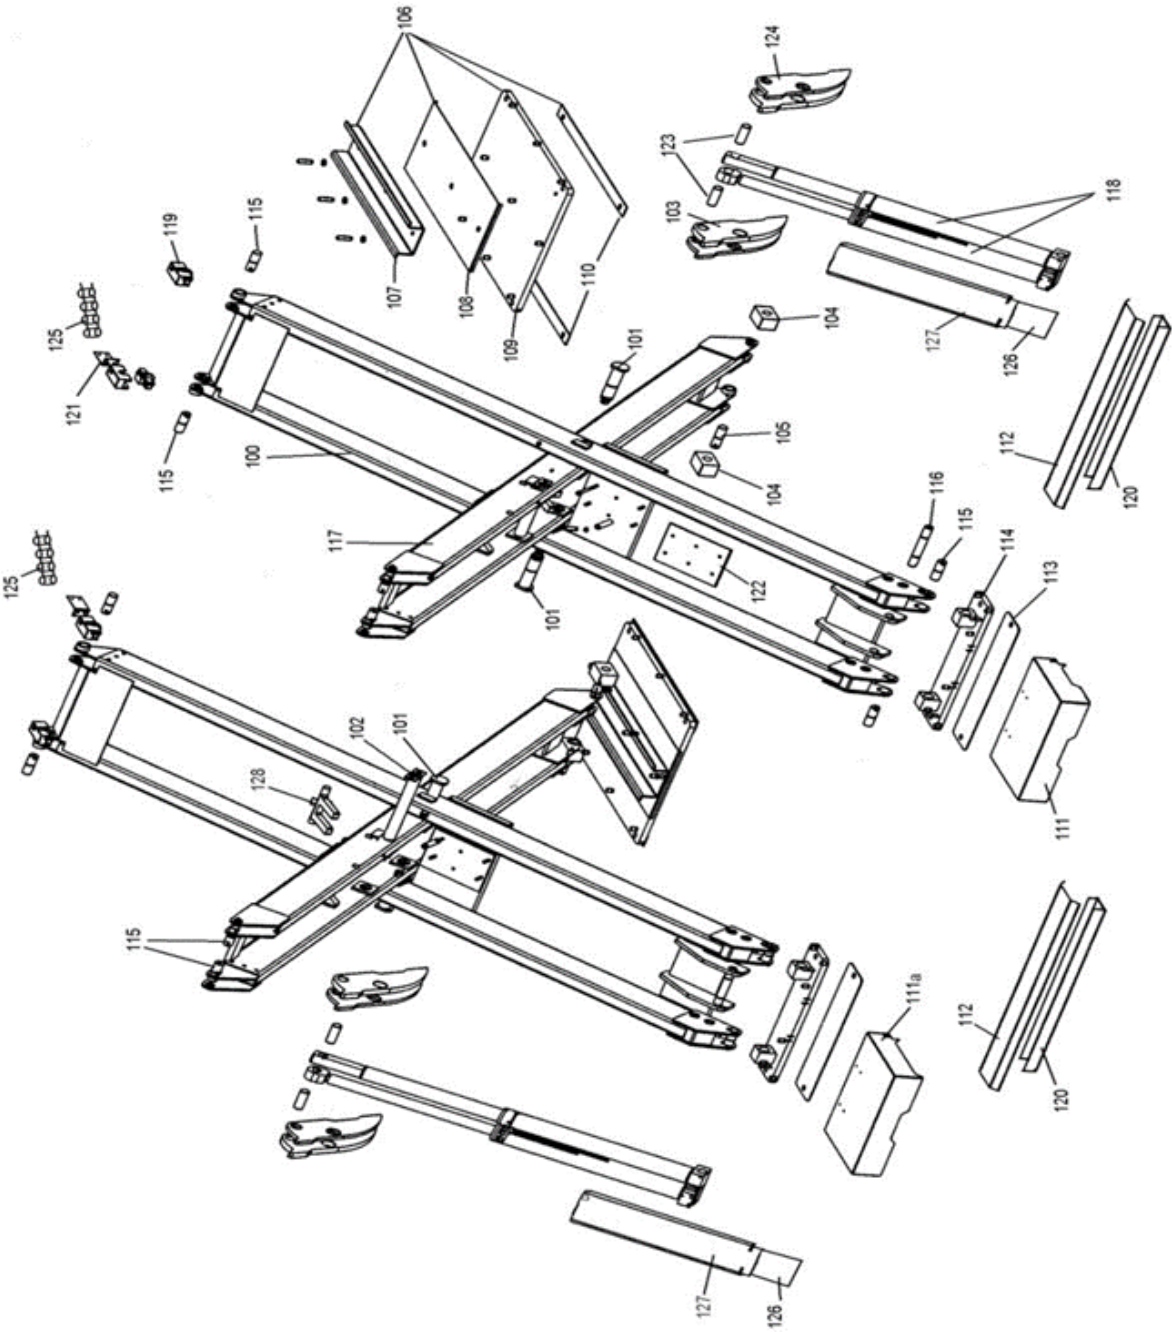
CSL 843/844

Spare Parts Manual

Class 4 NT
I325054 Iss 1



Image a



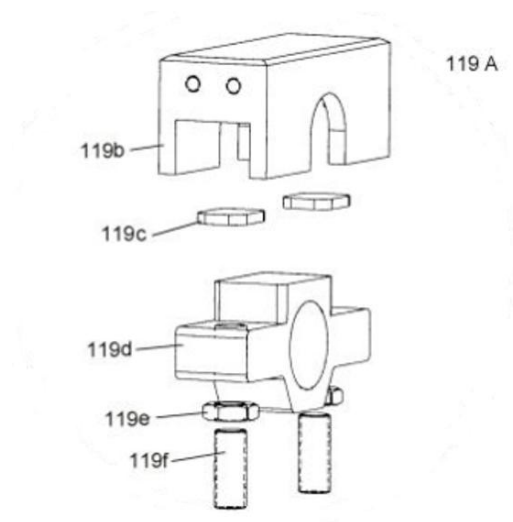


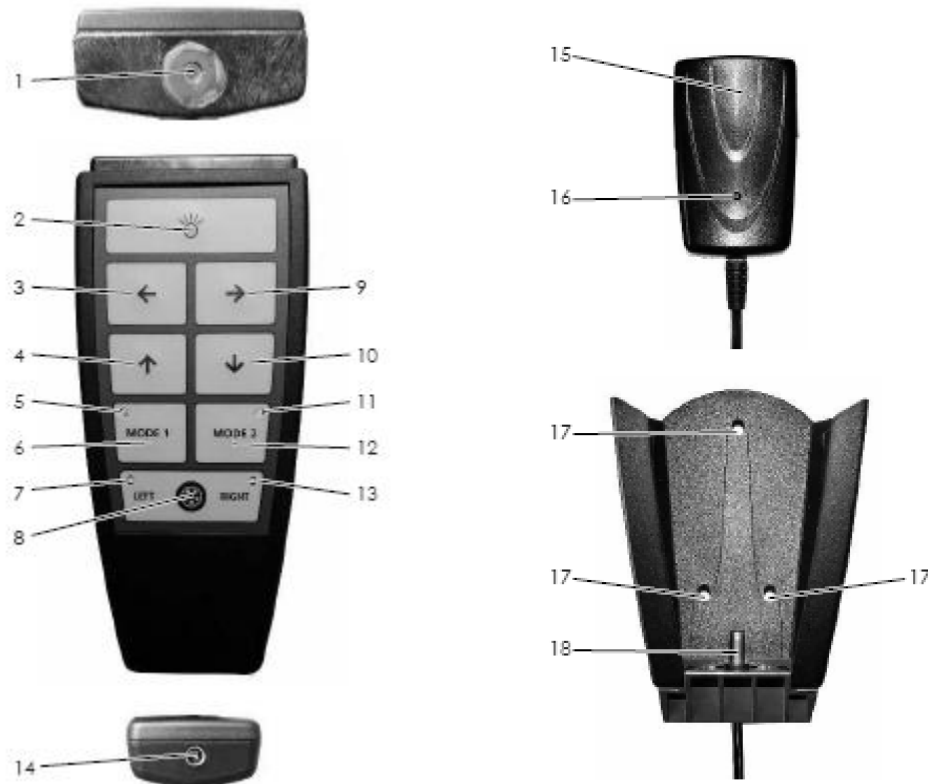
Image b



Image c

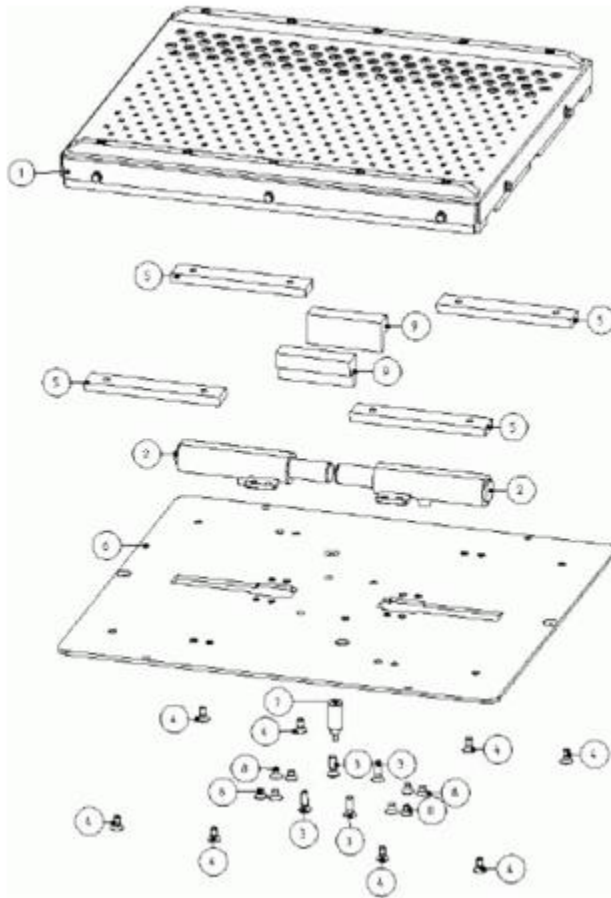
Item #	Description	A2C#	Old Part #	Ass Total
100	Scissor Complete		035UNI26403	2
101	Bolt		035UNI06042	4
+	Washer		9SC125M26ZN	4
+	Hex Castle Nut		9MU937M27X7,5ZN	4
+	Bearing		971001	4
102	Bolt		035UNI06309	4
103	Cylinder Lever		035UNI26279	2
+	Plain Bush Bearing		971001	2
+	Plain Bush Bearing		970929	2
+	Plain Bush Bearing		971002	2
+	Plain Bush Bearing		970928	2
104	Sliding Block		035UNI06021	4
105	Bolt		035UNI06030	4
106	Support Complete		035UNI05012	2
107	Guide		035UNI05020	2
108	Crosshead Guide		035UNI05022	2
109	Base Plate		035UNI05017	2
+	Set Screw		9GS913M16X050ZN	14
+	Hex Full Nut		9MU439M16ZN	14
+	Washer		9SC125M16ZN	8
110	Support		035UNI05015	4
111	Cover		035UNI09003	2
112	Cover		035UNI29017	2
113	Support		035UNI05007	2
114	Support Complete		035UNI05001	2
+	Plain Bush Bearing		970069	12
+	Set Screw		9GS913M16X050ZN	12
+	Hex Full Nut		9MU439M16ZN	12
+	Washer		9SC125M16ZN	12
115	Bolt		035UNI06033	12
116	Bolt		035UNI62021	2
117	Inside Scissor		035UNI06303	2
118	Cylinder Complete		035UNI02200K	2 Set
118a	Cylinder Master Side		035UNI02201	2
118b	Cylinder Slave Side		035UNI02202	2
119	Sliding Block		035UNI06121	4
119a	Sliding Block		035UNI26020	4
	Complete			
119b	Sliding Block		035UNI26022	4
119c	Sheet Metal		035UNI26023	8
119d	Holding Device		035UNI26021	4
119e	Hex Full Nut		9MU439M12ZN	8
119f	Set Screw		9GS913M12X30ZN	8
120	Hose Guide		035UNI29016	2
121	Chain Holder		035UNI06124	2
122	Support		035UNI06039	2
+	Split Pin		9KKS147110X024ZN	4
122a	Pipe		035UNI66010	2

Item #	Description	A2C#	Old Part #	Ass Total
123	Spacer		9SL6798M10ZN	2
124	Cylinder Lever		035UNI26288	5
+	Plain Bush Bearing		971001	4
+	Plain Bush Bearing		970929	2
+	Plain Bush Bearing		971002	2
+	Plain Bush Bearing		970928	2
125	Energy Chain		971117	2
+	Chain Connector		971118	2
+	Chain Connector		971119	2
126	Rubber Cover		030JL62076	2
127	Cover		030JL62072	2
+	Fixing Device		030JL62074	2
128	Fixing Device		035UNI06250	2

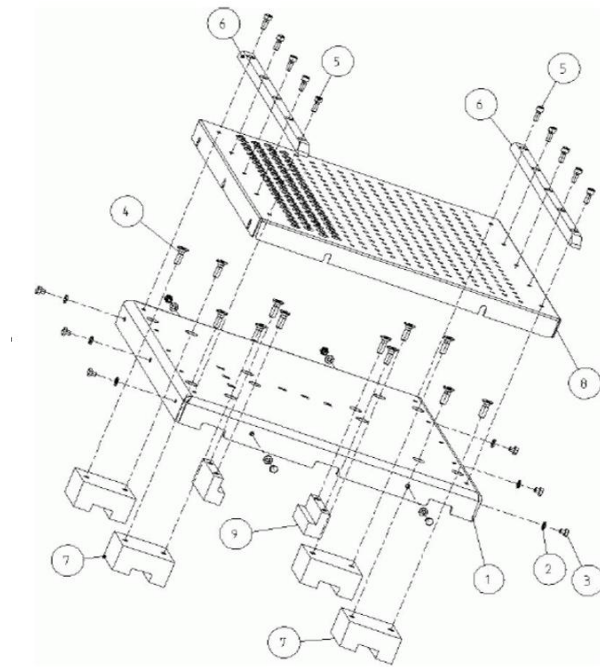
Play DetectorsWireless Play detector Handset – Part Number 1 987 009 P6KN

Hand transmitter has to be loaded with original charging unit!

- | | |
|-----------------------------|---|
| 1 LED diode | 10 Button backward |
| 2 LED diode ON / OFF | 11 LED MODE 2 |
| 3 Button LEFT | 12 Button Mode 2 |
| 4 Button FORWARD | 13 RIGHT side |
| 5 LED MODE 1 | 14 Charging socket |
| 6 Button Mode 1 | 15 Charging unit |
| 7 LEFT" side | 16 LED (red = charging, green = fully charged) |
| 8 Side selection | 17 Fixing hole |
| 9 Button RIGHT | 18 Charging plug |

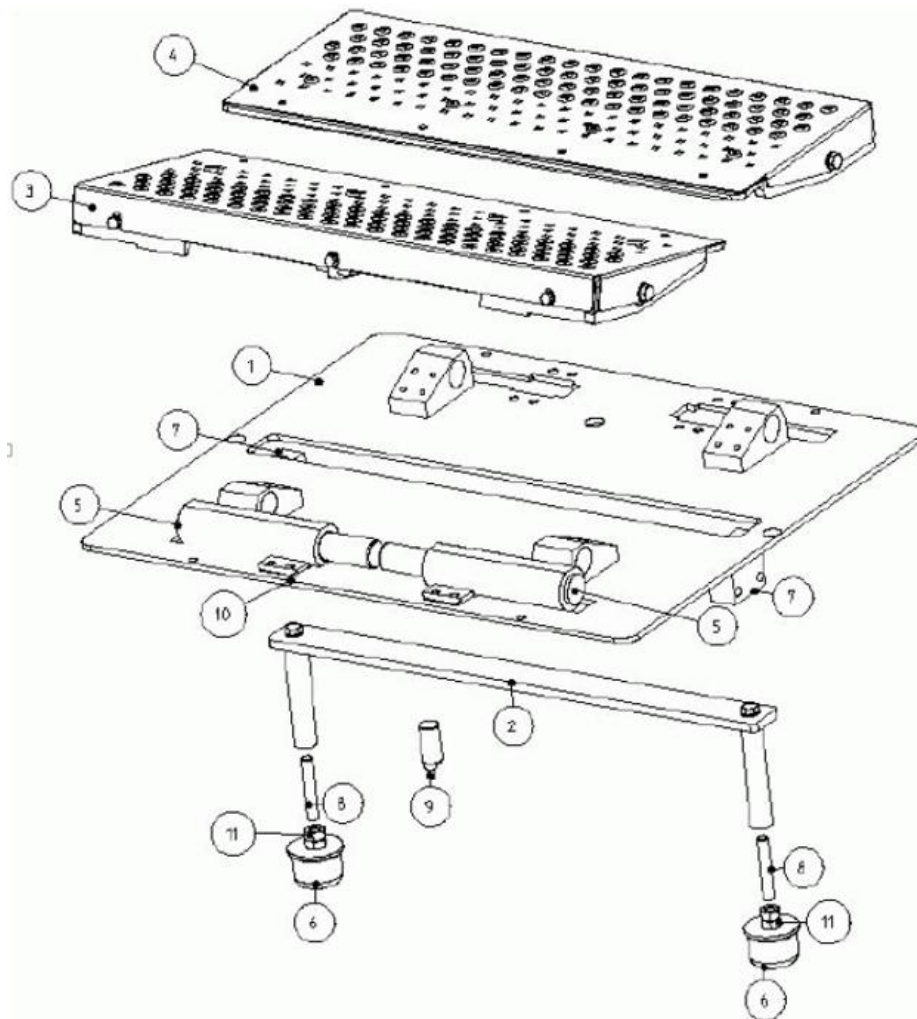
Play Detector Mechanical12. SPID 03HS08041

Item #	Description	A2C#	Old Part #
1	Push Plate		03HS08047
2	Cylinder		02HS02002
3	Countersunk Screw		97991M08X025ZN
4	Countersunk Screw		97991M08X016ZN
5	Guide Bar		03HS08007
6	Base Plate 2		03HS08045
7	Proximity Switch		9921822
8	Washer		97991M008X010ZN
9	Wrap-around Bead		03HS08009

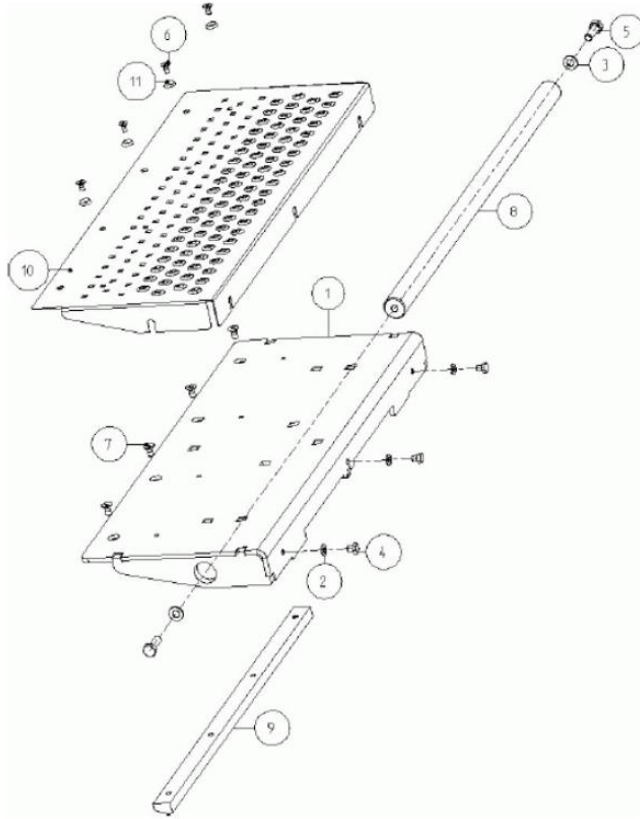
13. Push Plate (left) 03HS08047

Item #	Description	A2C#	Old Part #
1	Push Plate		03HS08043
2	Washer		9125M06ZN
3	Washer		9933M06X07ZN
4	Countersunk Screw		97991M08X025ZN
5	Socket Head Cap Screw		9912M06X016ZN
6	Contact Guide Rail		03HS08024
7	Guiding Block		03HS08026
8	Grip Plate		03HS08031
9	Wrap-around Head		03HS08009

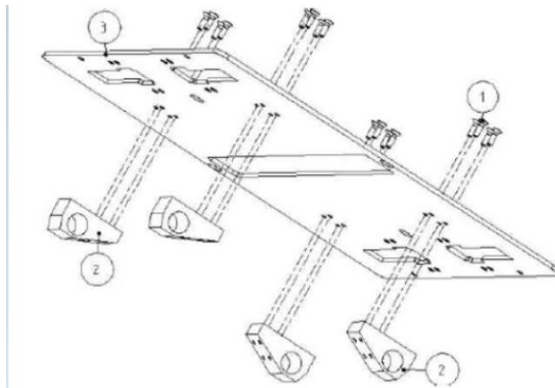
14.SPID 03HS08051



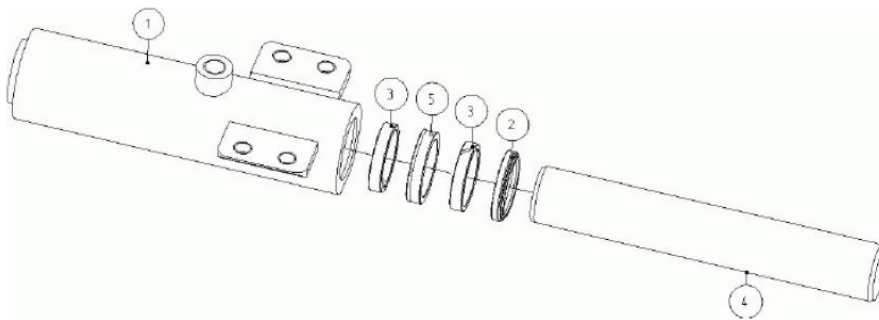
Item #	Description	A2C#	Old Part #
1	Base Plate 1		03HS08084
2	Lifting Bar		03HS08048
3	Luffing Plate (left)		03HS08130
4	Luffing Plate (right)		03HS08120
5	Cylinder		02HS02002
6	Buffer		970644
7	Guiding Block		03HS08098
8	Set Screw		9975M10X60ZN
9	Proximity Switch		9921822
10	Washer		97991M008X010ZN
11	Hexagon nut		9934M10ZN

16. Luffing Plate (right) 03HS08120

Item #	Description	A2C#	Old Part #
1	Luffing Plate (right)		03HS08103
2	Washer		9125M06ZN
3	Washer		9125M08ZN
4	Hexagon Head Cap Screw		9933MO6X07ZN
5	Hexagon Head Cap Screw		9933MO8X25ZN
6	Countersunk Screw		97991M05X10ZN
7	Countersunk Screw		97991M06X12ZN
8	Guidance Spindle		03HS08126
9	Sliding Strip		03HS08124
10	Grip Plate		03HS08131
11	Rosette		970010

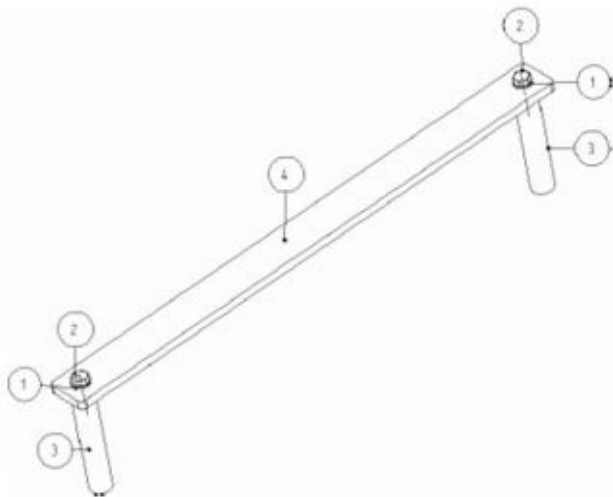
17. Base Plate 03HS08084

Item #	Description	A2C#	Old Part #
1	Countersunk Screw		97991M06X20ZN
2	Pilot Bearings		03HS08087
3	Base Plate 1		03HS08085

18. Cylinder 02HS02002

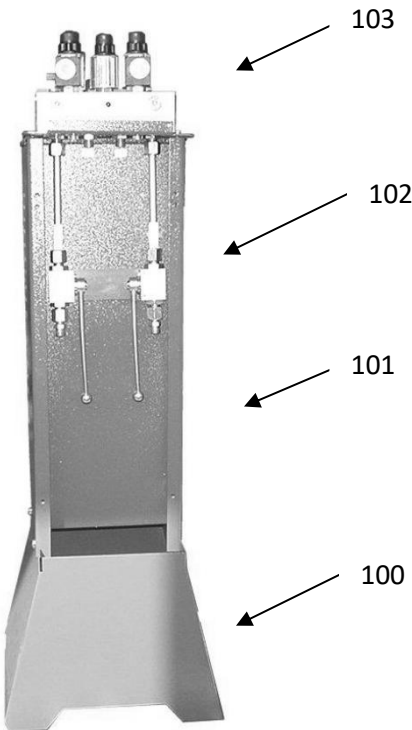
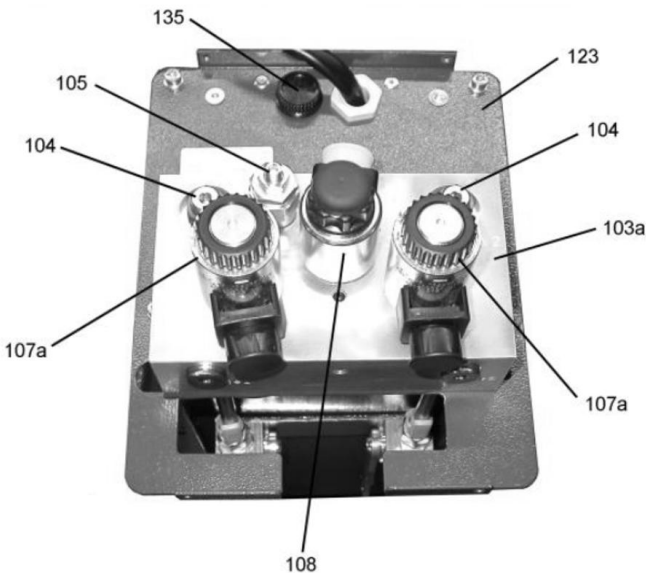
Item #	Description	A2C#	Old Part #
1	Cylinder		02HS02003
2	Stripper		982250
3	Guide Ring		986208
4	Piston Rod		02HS02015
5	Lip Seal		982249

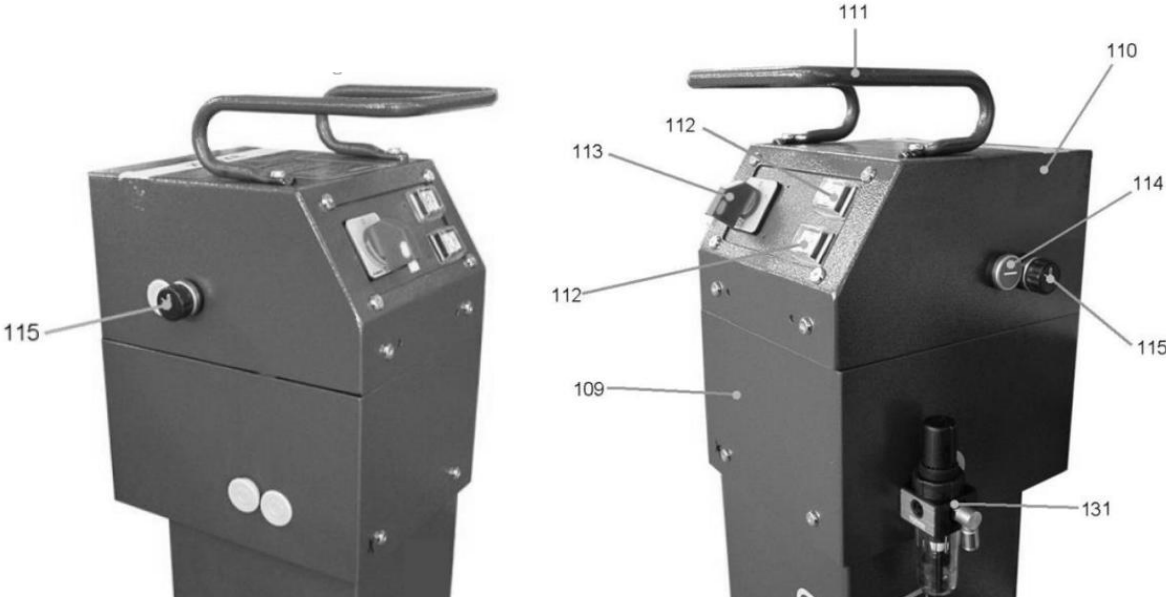
19. Lifting Bar 03HS08048

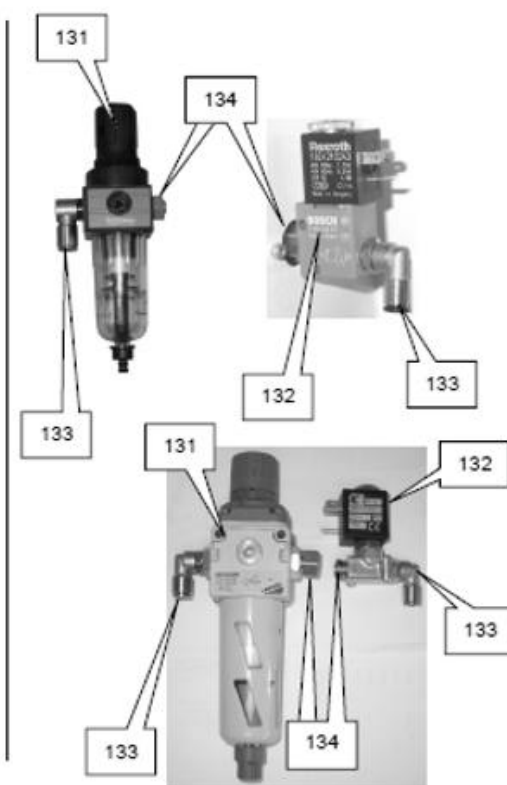
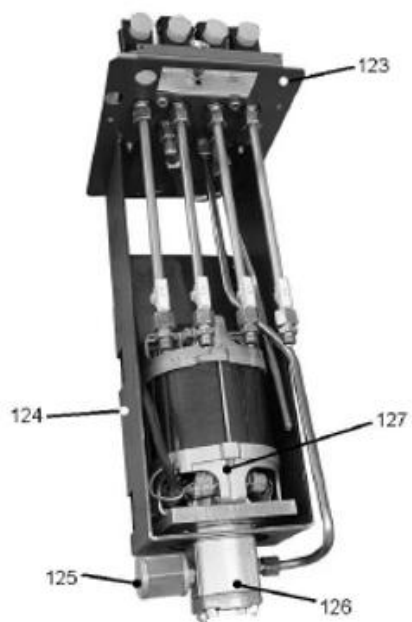
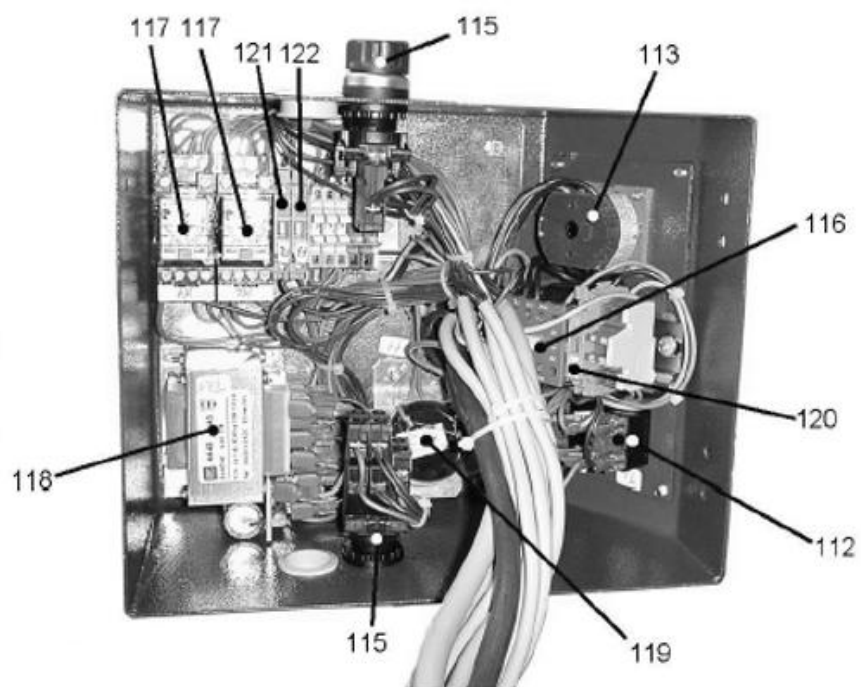


Item #	Description	A2C#	Old Part #
1	Washer		9125M08ZN
2	Screw		9933M08X30ZN
3	Guide Shaft		03HS08049
4	Lifting Bar		03HS08094

Control Console

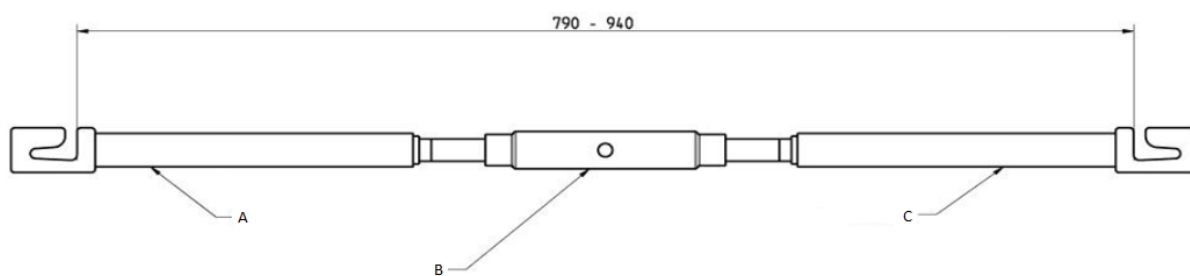




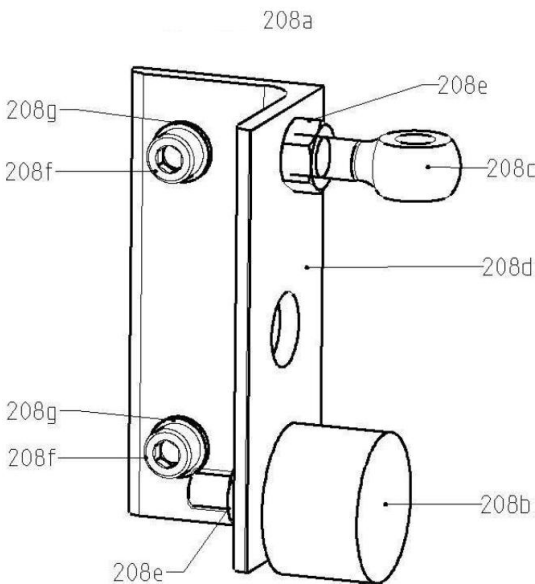


Item #	Description	A2C#	Old Part #	Ass Total
100	Foot		030JL21310	1
101	Oil Tank		030JL01353	1
102	Ball Valve		980513	4
103a	Hydraulic Block		99 550 01	1
104	Holding Valve		981530	2
105	Pressure Control Valve		155211	2
106	Oil Level Guage		980011	1
107a	Valve		600001	2
108	Valve		159318	2
109	Adaptor			1
110	Cover		030JL41332	1
111	Shackle		030JL01324	1
112	Press Button		990334	2
113	Main Switch		990403	1
+	Interrupter		990291	1
114	Press Button		990130	1
+	Sign Plate		991045	1
115	Switch		990446	2
116	Up Contactor		990842	1
117	Relay		990267	2
118	Transformer		990835	1
119	Loudspeaker		990331	1
120	Fuse		990302	1
+	Fuse Holder		990661	1
121	Fuse		990286	1
+	Fuse Holder		990661	1
122	Fuse		990307	1
+	Fuse Holder		990661	1
123	Metal Plate		030JL41305	1
124	Support		030JL01320	1
125	Oil Filter		980012	1

Item #	Description	A2C#	Old Part #	Ass Total
126	Gear Pump		980340	1
127	Motor		992658	1
129	Ball Valve		990513	1
130	Cover		030JL01308	1
131	Pressure Balance		960039	1
132	Pneumatic Valve Complete		960100	1
133	Screw Fitting		960121	2
134	Screw Fitting		960044	1
135	Oil Level Gauge		980011	1

Traverse – Part Number 030UNI08660

Stop for Jacking Beam



Item #	Description	A2C#	Old Part #
208a	Stop for Jack Complete Assembly		050ULN08910
208b	Rubber Stop		970424
208c	Eye Bolt		9444-A-M8X30
208d	Elbow Bracket		050ULN08911
208e	Nut		9934M8ZN
208f	Cylinder Screw		9912M6X12ZN
208g	Washer		9125-11-A6-4

After Sales Service

Apart from the routine maintenance and adjustments stipulated in this manual the equipment must not be tampered with in any way. All further servicing must be carried out only by an engineer from an Authorised Agent. Failure to observe these conditions will invalidate the Guarantee.

On-Site Service / Overhaul / Spare Parts

If you require a Service Engineer to attend ON SITE, either due to an equipment fault, or for machine calibration, or if the equipment covered by this manual requires to be sent back for factory overhaul, or if you need spare parts, please contact our Product Support Department.

■ Outside UK mainland

Service for export customers are provided by the agent from whom your equipment was purchased.

■ UK After-Sales Service

Call Crypton Support for details of local service agents.

■ Technical Information

Crypton also provide information and contracts covering:

Car Data, Fault Code Information, Diagnostic Information, Software Support Contracts,
Software Updates & Accessories.

CONTACT DETAILS

Contact UK Sales on 0844 665 7613

Email sales@cryptontechnology.com

Contact Support – 0844 665 7610

Email support@cryptontechnology.com

Continental Automotive Trading UK Ltd
36 Gravelly Industrial Park
Birmingham B24 8TA
United Kingdom
www.cryptontechnology.com

Crypton - A Brand of the Continental Corporation

E & O E. The Company reserves the right to introduce improvements in design or specification without prior notice.

The sale of this product is subject to our standard terms, conditions and relevant product warranty.

