



Changing the O2 cell on your Emissions unit


Guide

Guide

1. Close down the Petrol program
2. Switch off the Gas using the red rocker switch on the back on the top right
3. Unplug the cable on the old o2 cell



4. Unscrew the o2 cell from the gas analyser

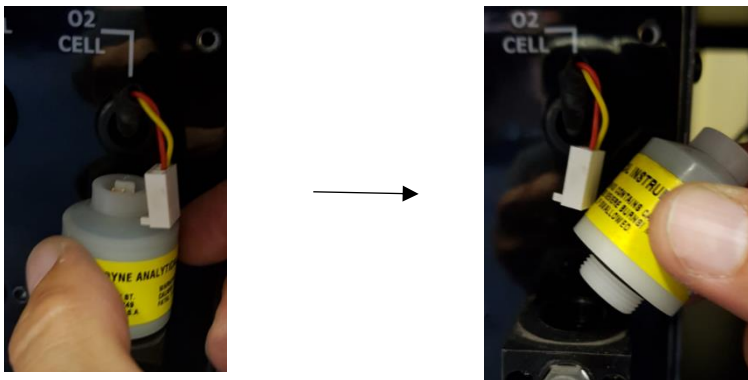


5. Remove the new o2 cell from the packaging
6. Screw it on to the gas analyser
7. Plug the cable back on to the top of the o2 cell



8. Start the petrol program using the icon on the desktop

9. Once on the **Main Menu** Go to **Tools & Setup** on the right hand side of the menu

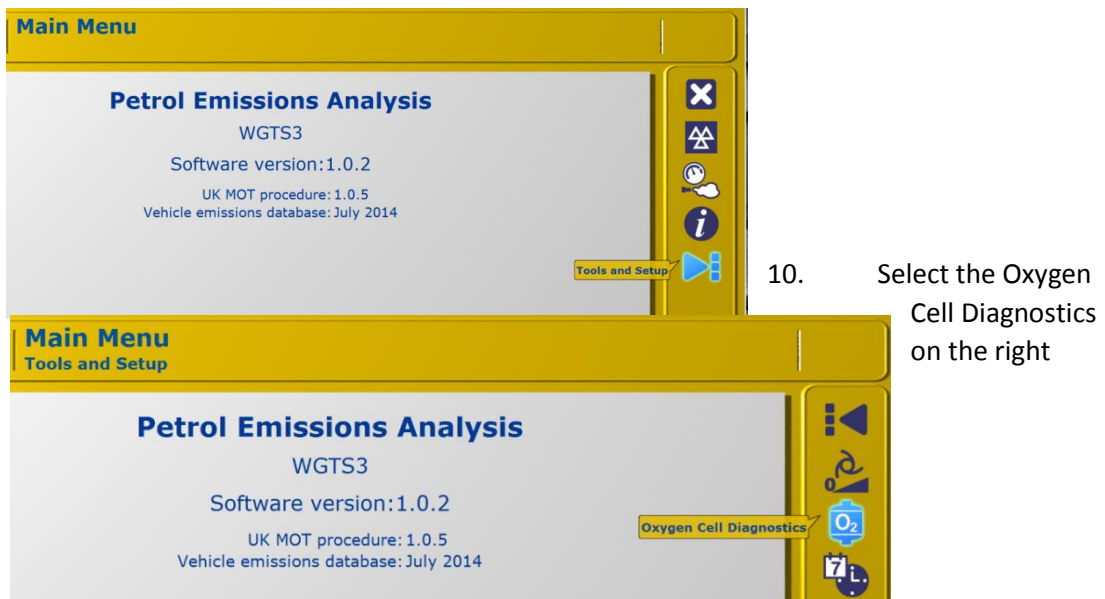

11. Click Install new Oxygen Cell

Oxygen Cell Test Results:

Reading	Minimum	Maximum	Diagnosis	
Oxygen cell output	10.97	5.00	13.00	Pass

Retest Oxygen Cell
 Install new Oxygen Cell

12. Let the program cycle through the necessary procedures
13. You should now have an Oxygen cell output of between 5 and 13 if not either check it has been installed correctly or the replacement is faulty.

Oxygen Cell Test Results:

Reading	Minimum	Maximum	Diagnosis	
Oxygen cell output	10.97	5.00	13.00	Pass

Continental Automotive Trading UK Ltd. 36 Gravelly Industrial Park, Birmingham, B24 8TA

Sales: +44 (0)844 665 7613 | Support: +44 (0)844 665 7610 | sales@cryptontechnology.com | www.cryptontechnology.com

Crypton – A brand of the Continental Corporation

E & O E. The Company reserves the right to introduce improvements in design or specification without prior notice.

